



Designed especially for Ifö Cera and Ifö Ceranova.

Pressalit Cera/Ceranova (Ifö), inkl. BJ6 fixed hinge with lift-off
 Pressalit Cera/Ceranova (Ifö), inkl. BB2 fixed hinge

Nr. 196xxx-BJ6999 with cover
 Nr. 196xxx-BB2999 with cover
 Nr. 195xxx-BB2999 without cover

Design/Year

Knud Holscher, 1994

Product Description

PRESSALIT toilet seat with cover, model "Cera/Ceranova", art. no. 196 made of colour ingrained duroplast with stainless steel hinges.
 - with BJ6 fixed hinge for lift-off of stainless steel/BB2 fixed hinge
 - centre distance: 155 mm
 - load - ringseat 240 kg
 - for Ifö Cera/Ceranova toilet
 - 10 year guarantee

Colour Programme xxx

With cover:
 000 white, 001 black, 011 white polygiene, 030 edelweiss, 050 jasmin, 092 cera grey, 112 anthracite grey

 Square: 757 white/silver, 758 black/silver, 759 anthracite/silver
 Jubilee: 760

Alternative hinges


BB2 Fixed hinge

Hinge Finish

999 Stainless steel

Spare Parts

A4023 Buffer for pushing into cover, oval, grey
 A4024 Buffer for pushing into seat, oval, grey
 A9115 Set of straps and screws, stainless steel
 A9139 Set of straps and screws, stainless steel, A9139030 edelweiss, A9139050 jasmin
 A4101 Screw for strap, stainless steel
 A4025 Buffer for straps, grey

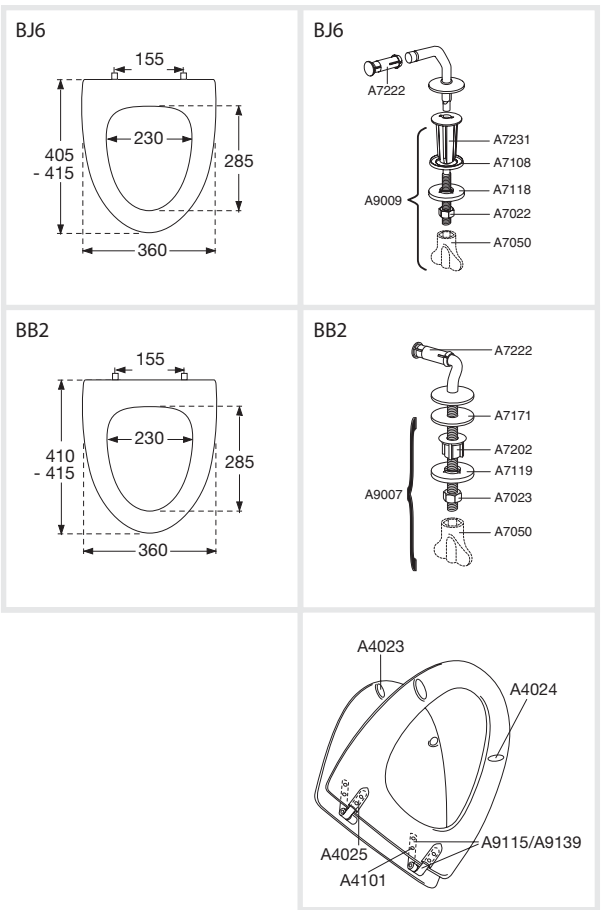

Seats for your senses

Product Weight

Net weight aprox. 3100 gr, incl. hinge

Packaging

Single carton
5 single cartons in a master carton
18 master cartons (90 seats) per pallet

Dimensions:

449x381x64 mm
456x388x340 mm

Weight:

3400 gr
17500 gr

Material Description

TOILET SEAT:

The material is colour ingrained duroplast (UF A 10 = urea formaldehyde) that contains no environmentally hazardous substances. The body consists of approx. 50% urea (NH_2CONH_2), approx. 25% cellulose and approx. 25% formaldehyde (HCHO), as well as small amounts of various fillers and additives.

BUFFERS:

EVA (copolymer made of ethylene and vinyl acetate).

HINGE LINKS:

Stainless steel (V2A) model W. no. 1.4301/M in accordance with DIN 17441/85.
Composition: chrome (cr) 17-19%, nickel (ni) 8-11%, carbon <0.05%, molybdenum, manganese, silicone, sulphur, titanium.

MOUNT/HINGES:

Stainless steel (V2A) model W. no. 1.4301/M in accordance with DIN 17441/85.
Composition: chrome (cr) 17-19%, nickel (ni) 8-11%, carbon <0.05%, molybdenum, silicone, sulphur, titanium.

Suitability List

Usable on universal toilets - see the printed seat suitability specifications

Cleaning Instructions

Use a mild soap solution. Seat and hinges should not be left damp, but be dried with a soft cloth. When using abrasive, corrosive or chlorine based cleaners for the bowl, avoid contact with seat and hinges. Therefore, when cleaning the bowl, make sure that seat and cover are in an upright position until all the cleaner has been flushed away.

The guarantee includes faults or defects in the material of our products within a period of 10 years.
Products subject to minor technical modifications and design deviations E. & O.E.



www.pressalit.com

Pressalit A/S
Pressalitvej 1
DK-8680 Ry
Tel.: (+45) 8788 8788
Fax: (+45) 8788 8789
pressalit@pressalit.com
- a division of Pressalit Group A/S



Seats for your senses