

Pressalit Sign – when wellness, functionality and individuality create perfection. The soft and rounded edges of the seat and the curved surface of the cover make Pressalit Sign a delight to the eye. With lift-off or fixed hinges.



Pressalit Sign incl. BR9 fixed hinge with lift-off  
Pressalit Sign incl. BD1 fixed hinge

No. 554xxx-BR9999 with cover  
No. 554xxx-BD1999 with cover

*Design/Year*

Pressalit 2006

*Product Description*

PRESSALIT toilet seat with cover, model "Sign", art. no. 554 of colour ingrained duroplast.  
 - incl. BR9 fixed hinge with lift-off/ BD1 fixed hinge  
 - incl. lift-off function or fixed hinge  
 - centre distance: BR9: 155 mm / BD1: 155 mm  
 - removable seat/cover facilitates cleaning (quick-release hinges)  
 - rounded edges  
 - load - ring seat 240 kg  
 - 10 year guarantee

*Colour Programme xxx*


With cover:  
000 white, 001 black, 333 sand

*Hinge Finish*

999 Stainless steel

*Spare Parts*

A4023 Buffer for pushing into cover, oval, grey  
 A4024 Buffer for pushing into seat, oval, grey  
 A9110 Plastic hinge link

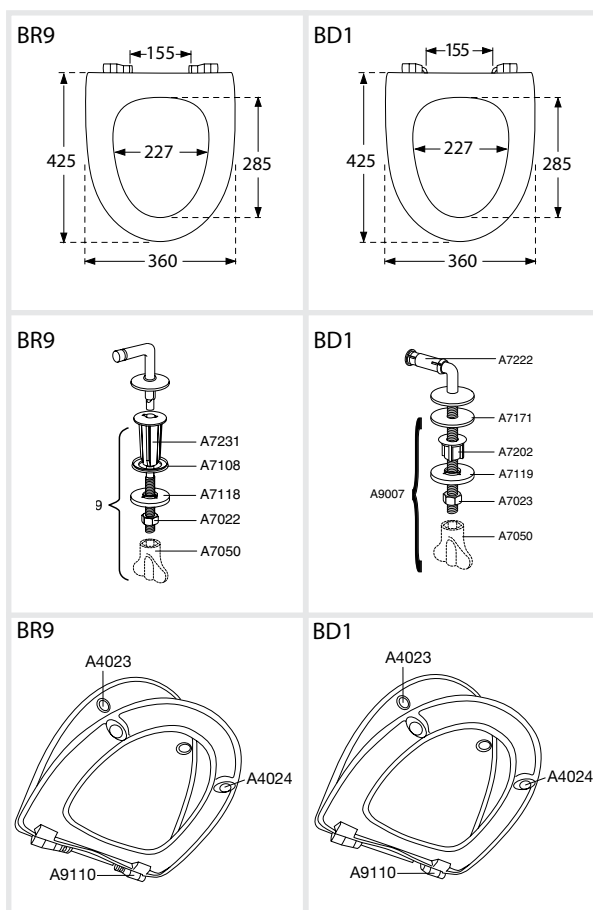

Seats for your senses

<i>Product Weight</i>	Net weight approx. 2600 gr, incl. hinge		
<i>Packaging</i>	Single carton 5 single cartons in a master carton 18 master cartons (90 seats) per pallet	Dimensions: 449x381x64 mm 456x388x340 mm	Weight: 2900 gr 15000 gr
<i>Material Description</i>	TOILET SEAT: The material is colour ingrained duroplast (UF A 10 = urea formaldehyde) that contains no environmentally hazardous substances. The body consists of approx. 50% urea (NH <sub>2</sub> CONH <sub>2</sub> ), approx. 25% cellulose and approx. 25% formaldehyde (HCHO), as well as small amounts of various fillers and additives.  BUFFERS: EVA (copolymer made of ethylene and vinyl acetate).  HINGE LINKS: PA6 (polyamide 6) and PBT (polybutylen terephthalat).  MOUNT/HINGES: Stainless steel (V2A) model W. nr. 1.4301 DIN 17441/85. Composition: chrome (cr) 17-19%, nickel (ni) 8-11%, carbon <0.05%, molybdenum, manganese, silicone, sulphur, titanium.		
<i>Suitability List</i>	Ifö Sign.		
<i>Cleaning Instructions</i>	Use a mild soap solution. Seat and hinges should not be left damp, but be dried with a soft cloth. When using abrasive, corrosive or chlorine based cleaners for the pan, avoid contact with seat and hinges. Therefore, when cleaning the pan, make sure that seat and cover are in an upright position until all the cleaner has been flushed away.  The guarantee includes faults or defects in the material of our products within a period of 10 years. Products subject to minor technical modifications and design deviations E. & O.E.		



[www.pressalit.com](http://www.pressalit.com)

Pressalit A/S  
Pressalitvej 1  
DK-8680 Ry  
Tel.: (+45) 8788 8788  
Fax: (+45) 8788 8789  
[pressalit@pressalit.com](mailto:pressalit@pressalit.com)  
- a division of Pressalit Group A/S



Seats for your senses